
List of storage features

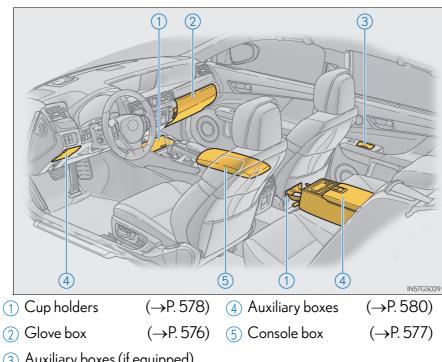

3 Auxiliary boxes (if equipped)

(→P. 580)

Ashtrays (if equipped)

 $(\rightarrow P.585)$

A CAUTION

■ Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire


■ When driving or when the storage compartments are not in use

Keep the lids closed.

In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open lid or the items stored inside.

Glove box

- 1 Open (press the button)
- 2 Unlock with the mechanical key
- (3) Lock with the mechanical key

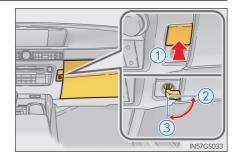

■Glove box light

The glove box light turns on when the tail lights are on.

■ Trunk opener main switch

The trunk opener main switch is located in the glove box. $(\rightarrow P. 142)$

■ Removing the insert

The insert inside the glove box can be removed.


■ The glove box door

An SRS knee airbag for the front passenger's seat is built into the glove box door. $(\rightarrow P.38)$

Interior features

Console box

- 1 Using with half-open Grip the knob to release the lock, and slide the armrest as far back.
- Using with fully open Grip the knob to release the lock, and lift the armrest to open.

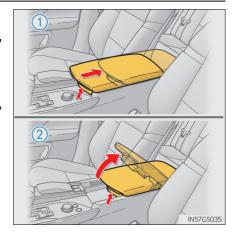

■ Tray in the console box

The tray slides forward/backward and can be removed.



■ Console box light

The console box light turns on when the tail lights are on.


A CAUTION

When using the console box with half-open, do not apply too much load on the armrest. Doing so may damage the armrest and may cause you to injure yourself.

Cup holders


■ Front

To open, press down and release the cup holder lid.

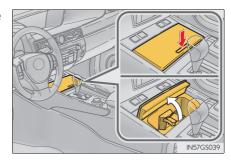


■ Rear

To open, pull down the armrest and press in and release the rear cup holder on the armrest.

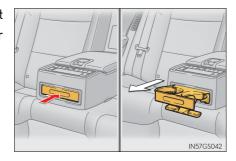

■ Removing the separate tray (front cup holder)

The cup holder insert may be removed for cleaning.

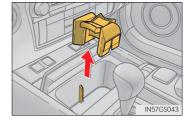

■ When stowing the cup holders (rear cup holder)

Stow the cup holder with the armrest down. The cup holder cannot be stowed if the armrest is not down.

A CAUTION

■ Items unsuitable for the cup holders

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury. If possible, cover hot drinks to prevent burns.

♠ NOTICE

■ To prevent damage to the rear cup holder

Stow the cup holder before stowing the armrest.


Auxiliary boxes

▶ Type A

Press in the button.

▶ Type B


Pull up the lever to release the lock and lift the lid.

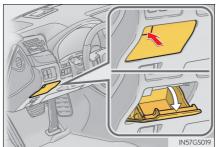



► Type C (if equipped)

Open the lid.

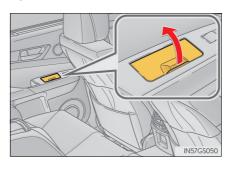

A CAUTION


■ Using the auxiliary boxes (type C)

Do not use the auxiliary box as an ashtray. Doing so may cause a fire.

Cargo hooks


Raise the hooks when needed.

The cargo hooks are provided for securing loose items.

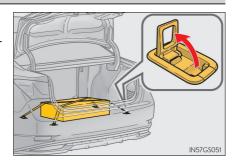

Luggage hook


Pull the strap when using the hook.

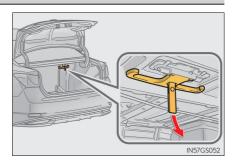

5


Interior features

First-aid kit storage net

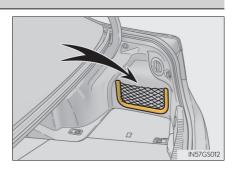


Luggage mat

Pull the strap upwards to lift up the luggage mat.

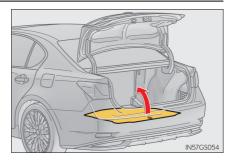

Warning reflector storage belt

- 1 Loosen the belt
- 2 Tighten the belt

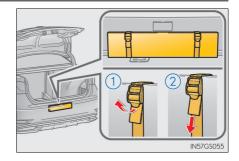

A CAUTION

■ When the cargo hooks are not in use

To avoid injury, always return the cargo hooks to their stowed positions.



■ Luggage hook weight capacity

Do not hang any object heavier than 11 lb. (5 kg) on the luggage hook.